

M-150

Field Installation Manual

INDEX

Important Instructions.....	2
Product Specifications.....	3
Unpacking & Mounting	4
Connection Type 1	5
Connection Diagram.....	6
Connection Type 2	7
Connection Type 3	8
Electrical Data Sheet	9
Recommended Part List.....	10

M-150

IMPORTANT INSTRUCTIONS

ATTENTION: After completing the installation and testing, it is essential that this booklet is drawn to the attention of the person responsible for its future operation and maintenance and is available for ready reference all the time.

FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION & OPERATION WILL VOID WARRANTY OF M-150 AND COULD CAUSE SERIOUS PERSONAL INJURY, FIRE HAZARD & ELECTRIC SHOCK MAY LEAD TO DEATH.

CAUTION:

To prevent electric shock, disconnect electric power to system at main fuse or circuit breaker box until installation or rework is complete.

PRECAUTION:

Do not use on circuits exceeding specified voltage.

Do not short main terminals to test.

Electrical Installation and all components of the installation must be UL listed / UL approved and as per NEC code.



WARNING

Celec Manufactured component parts that can be used in a wide variety of industrial & commercial applications. The selection and application of Celec products remains the responsibility of the equipment designer or end user. Celec accepts no responsibility for how its products may be incorporated into final design. Under no circumstances should any Celec product be incorporated into any product or design as the exclusive or sole safety control, all controls should be designed to dynamically fault defect and fail safety under all circumstances. Any warning provided by Celec must be passed through to the end user. Celec offers a warranty only as to the quality of its product to confirm to the catalog specifications. No other warranty is offered. Celec assumes no liability for any personal injury, property damage, losses or claims arising out of the misapplication and Nonperformance of its products.

PRODUCT SPECIFICATIONS



Model: **M-150**
Rated Voltage..... **480V AC**
Phases..... **Three phase Wye/Delta**
Rated Frequency..... **60Hz**
Maximum Current..... **180 Amp each phase**
Rated kVar **150**
Maximum Ambient Temperature **40°C**
Enclosure..... **Type 1**

Terminals	Wire Size	Connection Type	Torque N-m (Lb-in)
T1	2 Wires of 2AWG (on Each Phase)	Circuit Breaker	31 (274)
T2	18-22 AWG, Str.	CT Terminal Block	0.5 (7)
T3	18-22 AWG, Str.	RS 485 Terminal Block	0.5(7)
Earthing Terminals	2 AWG, Str.	Bonding	15 (133)

UNPACKING

1. Un Pack the M-150 from box using Plastic Strip Cutter & 17 No. Spanner.
2. Collect the Accessories as per the Packing Slip.
3. Remove any cardboard or Thermocol packing inside the M-150 given for support during transportation.
4. Install the Circuit Break handle on the door.
5. Do not use M-150 in case of any Breakage or loose connections or Oil Spill inside.

MOUNTING

CAUTION: - Indoor Use Only, Type-1 Enclosure.

1. Choose the dry and Clean Place to Install the M-150 taking care conduit connections from Top Right side. Enclosure Size is 800 x1000* x 300mm (W X H X D)
2. Fix the panel on floor or wall with appropriate sized fasteners.

* **Height With Feet 1100mm**

M-150

Field Installation Manual

Connection Type # 1

Use this instruction

If 250 Amp. MCCB/SFU(Switch Fuse Unit) is available in customer Main Breaker Panel.

M-150 is designed for use with Main Breaker Panel Three Phase 480V AC WYE/Delta Connection, up to 1000 Ampere. M-150 unit should be mounted on the wall or the floor with four appropriate sized fasteners before connect to Main Breaker Panel.

1.1 Power Connections

- 1.11 Using panel key open the door of M-150 exposing connections. Open the Busbar Shield.
- 1.12 Locate Earth Terminal in M-150 on the top, connect the earth wire to M-150 Earth Terminal. Connect the other side of earth wire to main breaker panel ground rod. Ensure all mechanical connections are secure and making full contact.
- 1.13 Locate existing 3 Pole 250 Amp MCCB/SFU(Switch Fuse Unit) in the Main Breaker Panel.
- 1.14 Connect 2 Power Cables of 2 Awg to each phase of MCCB/SFU.
- 1.15 Qualified Representative must inspect size of cable
- 1.16 Locate the Terminal T1 (L1,L2,L3) in M-150 Panel.
- 1.17 Connect 2 Power cables of 2Awg Incomer in phase Sequence using copper compression lugs on both Sides of Busbar.
- 1.18 Ensure the Torque to tight lugs on Busbar.
- 1.19 Reinstall the Busbar shield.
- 1.20 Make sure that No Spacing Error from Phase to Phase and phase to earth.

1.2 Current Sensor Connections


- 1.21 Open one side of Split CT (Current Sensor). Clip the CT on the wire L3 before main Circuit Breaker Panel as shown in (figure 1) page 6.
- 1.22 Locate Terminal Block T2 (S1-S2) in M-150.
- 1.23 Qualified Representative line side of Main Panel should connect the wires 18-22 AWG from external CT to T2 (S1-S2), preferably twisted together.
- 1.24 Firmly secure current sensor to line side (L3) of main circuit breaker.

1.3 RS 485 Connections

- 1.31 Locate the terminal T3(A-B).
- 1.32 Connect the wires 18-22 AWG from external RS 485 master due to preferably twisted together.

M-150 Field Installation Manual

Connection Diagram

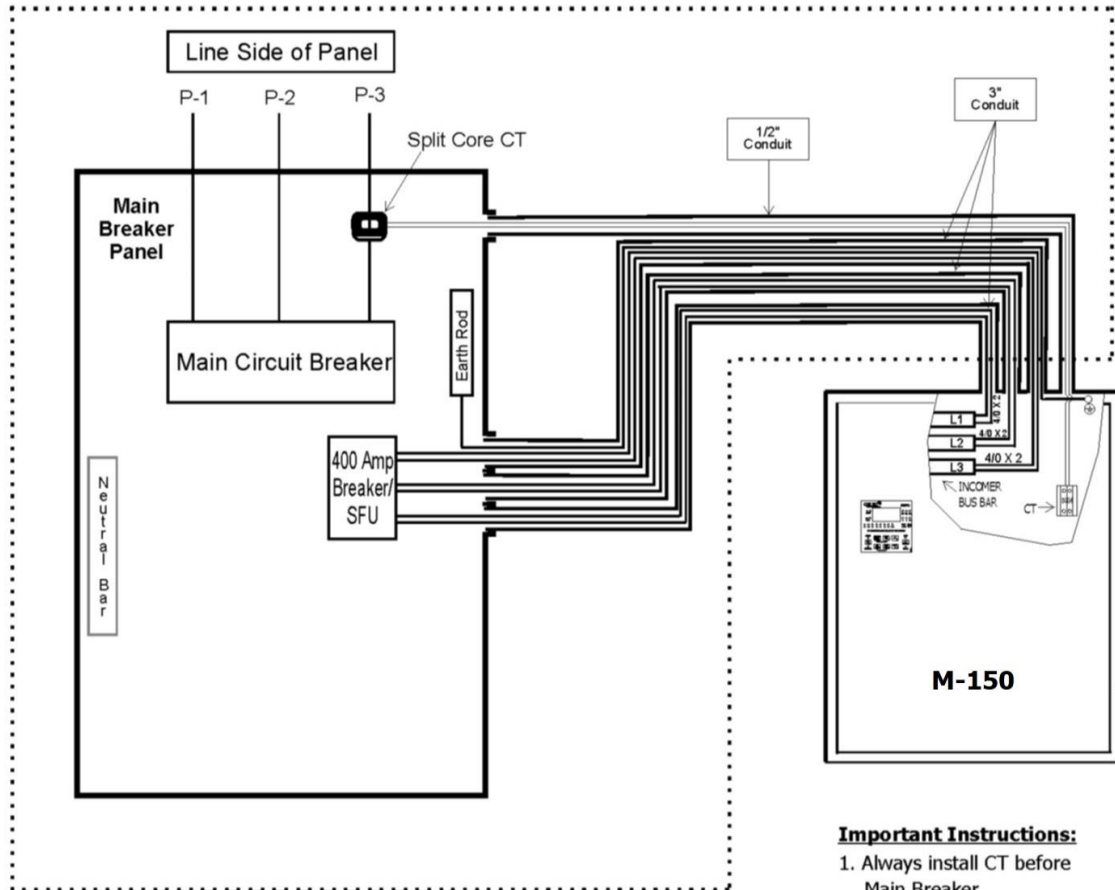

Important Instructions:

1. Always install CT before Main Breaker.
2. Twist the CT Wire.
3. Always install CT on L3 Phase before Main Breaker.
4. Interchange S1-S2 if Control Head shows '-CE'.

Note:

- All Components used for installation must be UL listed or UL recognized.
- Earth Terminal in M-240 must be connected to Panel earth rod.
- All external connections and additional work must be performed by qualified representative in accordance with NEC.
- Failure to comply will void warranty.

Figure-1

M-150

Field Installation Manual

Connection Type#2

Use these instructions

If 250 Amp MCCB / SFU is unavailable, existing blanks are available.

M-150 unit is designed for use with Customer Main Breaker Panel Three Phase 480V AC WYE/Delta Connection, up to 1000 Ampere.

M-150 units should be mounted with four appropriate sized fasteners before connect to Main Breaker Panel.

1. Remove existing 3 Pole breaker blanks and install new 3 Pole 250 Amp MCCB / SFU.
2. For rest of connection follow the Connection type#1 on page 5.

M-150

Field Installation Manual

Connection Type#3

Use this instruction

If 250 Amp MCCB / SFU is unavailable and require a new disconnect switch or other approved device.

M-150 unit is designed for use with Customer Main Breaker Panel Three Phase 480V AC WYE/Delta Connection, up to 1000 Ampere.

Representative must purchase 250 Amp Blade-Fused Disconnect Switch or 250 Amp MCCB for connection of M-150 to Customer Main Breaker Panel.

1. Install new 250 Amp Blade-Fused disconnect or External Circuit Breaker switch to wall or existing backboard. Qualified Representative should note if codes allow for direct connection to bus bars in main breaker panel or requires installation of an additional sub panel.
2. Wire in rigid conduit between customer main breaker panel & external disconnect switch. Connect to M-150 using conduit.
3. Locate earth ground connection in M-150 and connect to grounding bar or to earth ground rod in main breaker panel.
4. For rest of connection follow the Connection type#1 on page 5.

M-150

Field Installation Manual

Electrical Data Sheet

Model	M-150
Phase Configuration	Three Phase 480V AC WYE/Delta
Maximum Line Voltage	480V AC
Maximum Power	150 kVar
Steps	8
Monitoring	PF, kVA, kVar, Volt, Current, KW, & Capacitor Status
Accuracy	05 Kvar
Frequency	60Hz
Protection	Capacitor Inbuilt Protection P2, capacitor short circuit 10,000A Capacitor over current protection.
Equipment Protection	Internal design has adequate clearance and creepage distance Against line transients, MOVs not required.
MCCB / SFU Required	250 Amp 3 pole
Low Losses	1.5 Watt each step
Human Protection	All High voltage shielded from contact.
Operating temperature range	40°C Ambient
Dimensions (W X H X D)	800 x 1000* x 300 mm Metal Enclosure Type 1
Operating Life	Switching tested up to 6,000 times,
Dielectric Strength	1.96 kV for 1 min.
Unit Weight	

*Height with Feet 1100mm

M-150

Field Installation Manual

Recommended Parts List

Item	Make	Part No.	Qty.
Cable 2X2Awg 600V	Any *	UL1015	As required
CT Wire 18-22 AWG Str. 600v	Any *	UL1015	As required
Foundation Bolts	Any *	UL 1015	As required
CT (Current Sensor)	Megnelab	SCT-2000-1000	1
Wall Plug (pin type) Size 10 x 75 mm	Any	---	4
1/2" Conduit Connector	Any *	---	4
1/2" Tube/Conduit	Any *	---	As required
Conduit Connector	Any *	---	As required
Tube/Conduit	Any *	---	As required
Compression Lugs	Any*		6 Pcs.

***All the Parts used in installation must be UL recognized or UL listed.**

NOTE

Installation of material and workmanship at the customer's Main Breaker Panel shall be the responsibility of the qualified Electrician in accordance with NEC. Any and all connections exterior to the M-150 unit shall be the responsibility of the qualified Electrician.